 


# How to set the Driver Seat position for 1 or 2 people.

You can store two driver's seat positions (except power lumbar) with the two-position driving memory system. Your Honda has two remote entry fobs/transmitters: one is linked to Driver 1 and the other is linked to Driver 2. The primary driver should always use the fob designated for them.

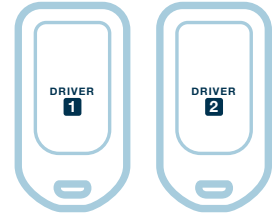

- Memory Button 1
- Memory Button 2
- SET Button

## Storing a Seat Position in Memory

1. Set the power mode to **ON**;  
then adjust the driver's seat to your desired position
2. Press the **SET** button (You'll hear a beep and the MEMORY button indicator light will blink)
3. Press and hold **MEMORY** button 1 or 2 within five seconds of pressing the **SET** button (Once the seat position has been memorized, the indicator light on the button you pressed stays on)

## Recalling a Stored Seat Position

1. Put the car in Park.
2. Apply the parking brake.
3. Press **MEMORY** button 1 or 2. (The seat will automatically move to the memorized position. When it stops moving you'll hear a beep and indicator light will stay on)