

How to Customize Interior Light-Dimming Time –DII Models

Honda vehicles equipped with the Driver Information Interface (DII) enable you to customize certain settings, including how long the interior overhead light stays on after closing the doors. Use the steering wheel-mounted switches on the left to customize the lighting with the DII.



Home Button

Follow these steps:

1. With the vehicle in **Park**, turn the ignition to **Accessory** or **On**
2. Press the **HOME** button
3. Use the **UP/DOWN** buttons to scroll to **Settings**;
then press **Enter**
4. Use the **UP/DOWN** buttons to scroll to **Vehicle Customization**;
then press **Enter**
5. Use the **UP/DOWN** buttons to scroll to **Lighting Setup**;
then press **Enter**
6. Use the **UP/DOWN** buttons to scroll and select **Interior Light Dimming Time**;
then press **Enter**
7. Select from: **60sec, 30sec, 15sec**
8. Press **Enter**
9. Press the **HOME** button to exit