

Seatback Angle Adjustment (Adjust Reclining Position)

Adjusting the seatback position (reclining position) of the front seats is easy to do whether it's a power or manual adjustment. Use the following methods to adjust the seat for comfort.

Follow these steps:


Power Seatback Angle Adjustment

- 1 Located on the outside edge of the seat bottom toward the rear of the seat is the SEATBACK ANGLE ADJUSTMENT SWITCH
- 2 To adjust the seatback, push the SEATBACK ANGLE ADJUSTMENT SWITCH forward or back to position the seatback



Manual Seatback Angle Adjustment

- 1 Located on the outside edge of the seat bottom toward the rear of the seat is the SEATBACK ANGLE ADJUSTMENT LEVER
- NOTE: The lever toward the front of the seat adjusts the seat height.
- 2 To adjust the seatback, pull the SEATBACK ANGLE ADJUSTMENT LEVER up and position the seatback forward or back

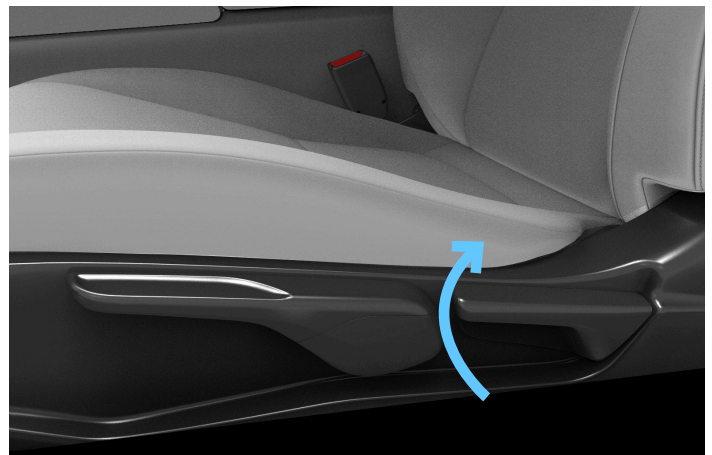

WARNING

Failure to position a seat to allow proper seatbelt and airbag operation, including excessively reclining the seat, could result in injuries or death in a crash.

All occupants should sit upright, well back in the seat, with their feet on the floor throughout the duration of a drive.

Excessive seat recline, slouching and leaning out of the seat reduces the effectiveness of the seat belt.

For more information, see your Owner's Guide.